


Oil sealing kit for capsules

Instruction for use


With the help of our sealing kit, you can easily fill capsules with oily liquids. The sealing solution solidifies at room temperature and thus prevents the liquid from leaking. Please note that you should never fill capsules with liquids containing water-containing liquids, as they will dissolve before use. With this set you can seal and dry 24 capsules in one operation. Depending on the capsule size, up to 1000 capsules can be sealed with the solution. The set is available for capsules of sizes 1, 0, 00 and 000. On the packaging of the capsule filler you can see for which capsule size your set is suitable.

Contents

- Capsule filler for filling and sealing capsules
- 100 grams of sealing solution (pure cocoa butter in food quality)
- Pipette with dosing option and child safety lock
- Mini funnel, drying tray, silicone brush, drying tray

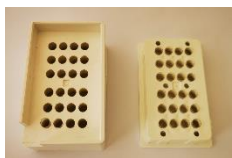

1. Make sure that all parts of the appliance are complete and dry. Place the base part with the wide part of the stand on top. Then insert the longer part of the capsules into the holes of the base part and the shorter part into the holes of the top part (open ends facing outwards).

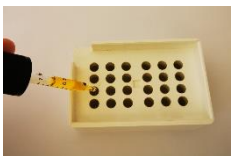

2. Fill the oil into the pipette bottle using the mini funnel. Then fill the capsules to about 80% with the oil using the pipette. If the capacity is 0.68 ml as in size "0", put in about 0.5 ml. If the capacity is 0.9 ml, as in size "00", you should put in about 0.7 ml.




3. Place a cosmetic tissue or a piece of kitchen roll in the drying tray and have it ready now for step 7. Your capsules can dry here later after you have filled and sealed them.



4. Heat the sealing solution to about 30 to 33 degrees until it is liquid. Make sure, that the solution does not get too hot, otherwise the capsules may melt. Then pour the sealing solution into a shallow bowl until it covers it to a height of about 3 mm. Press upper part into the solution for a short moment.



5. Remove the base part from the stand, place it on a flat surface and put the top part on the base part. Then press down firmly on the sides of the top part until the machine stands on the floor. The filled capsules are now automatically joined together and held in the upper part.

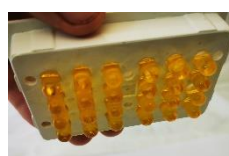

6. Take the upper part with the filled capsules and hold it over the drying tray. Press the white plastic plate with both hands. If the capsules do not fall out immediately, you can remove the spring plate and press the capsules from the inside out with the tamper so that they are ejected into the drying tray.



7. Let the capsules dry for 30 - 60 min, preferably in the refrigerator. If possible, the capsules should not touch each other. To prevent the sealing solution from melting at high temperatures, store the capsules in the refrigerator in summer.

8. Repeat the process for further batches. If you do not want to fill any more capsules, you should clean all parts immediately in hot soapy water or in the dishwasher.

Good luck!